

## STARTER INSTALLATION GUIDE

### REMOVING THE STARTER

1. Disconnect cable connections from battery.



2. Remove the 2 bolts that hold the starter in place on the bell housing.



3. Remove the ground and power cables from the starter.



4. Finally, remove the starter assembly.



### INSTALLING THE STARTER

1. Reinstall the ground and power cables.
2. Carefully slide the new starter in place.
3. Replace the bolts on the starter.
4. Finally, reconnect the battery cables.