

USE INSTRUCTIONS CONTINUED

- 05.** Adjust the leg to desired height and engage the twist lock of the leg by twisting the inner leg. **See Diagram 3.**



- 06.** With one hand holding the front beam, extend the horizontal support arm, and place the arm pin into the corresponding hole in the front beam. Twist the arm to engage the twist lock. **See Diagrams 4 & 5.**



- 07.** Secure the awning to the horizontal support arms using the Velcro tabs.

- 08.** Secure the legs to the ground using the supplied pins and rope loops in the feet. Secure the guy lines to the awning in case of winds. **See Diagram 6.**



- 09.** To store the awning, reverse the above instructions.

CAUTIONS

- ▶ Always secure the awning with pegs and guy lines - This will prevent wind from lifting the awning and causing damage to the awning and your vehicle.
- ▶ Do not store the awning wet - The awning is waterproof, but storing wet may result in mold or mildew growth. The awning can be stored away wet for limited periods, but should be opened and allowed to dry as soon as possible.
- ▶ Regularly check that all nuts and bolts attaching your awning to your vehicle are tight and in good condition.
- ▶ In the event of rain, ensure that the awning is set to an appropriate angle to allow rain water to run off and not accumulate on top of the awning.
- ▶ In windy conditions, it is essential that the awning be secured to the ground to prevent damage to the awning and to the vehicle.

INSTALL/USE GUIDE

BORNE OFF-ROAD VEHICLE ROOF AWNING

IMPORTANT

Please carefully read all installation instructions and safety warnings prior to installing this awning on your vehicle. Failure to follow all instructions may result in damage to your vehicle or personal injury.



PACKING LIST


- (1) Rooftop Vehicle Awning
- (4) Pegs
- (2) Guy Lines
- (4) 8mm x 20mm Stainless Steel Bolts
- (2) "L" Bracket
- (2) 8mm x 20mm Square Screw
- (1) Wrench

BORNE OFF-ROAD VEHICLE ROOFTOP AWNING – INSTALLATION INSTRUCTIONS


The Borne Off-Road vehicle rooftop awning has been designed to fit most roof racks and roof bar systems, including camper trailers. To ensure safe and secure operation, please carefully follow these simple mounting, operating, and care instructions.

Note: The Borne Off-Road Vehicle Rooftop Awning includes a universal mounting system. For information on mounting accessories to your specific roof rack or roof bars, please reference the manufacturer’s instructions and available accessories.


- 01.** For roof racks with 20mm T-tracks, insert the included T-bolt into the track and assemble the L-bracket washer and nut as shown.

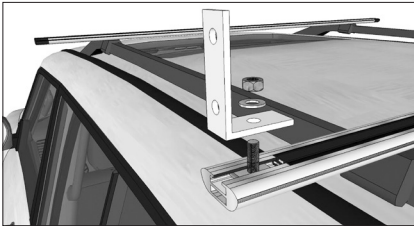


- 02.** Repeat step 1 for the remaining rail on the same side of the vehicle.

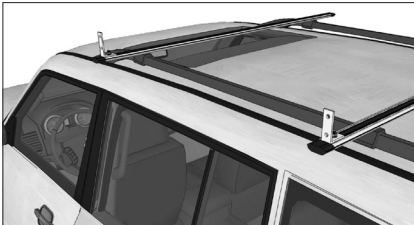


- 03.** Slide the M8 x 20mm bolts into the back of the awning so that the head of the bolt is captured by the extrusion.

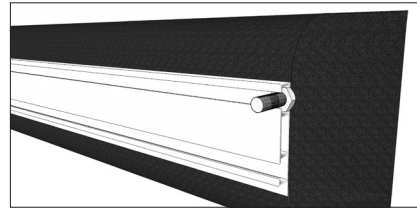

- 04.** Position the bolts so that they line up with the L-brackets and the awning is positioned as desired along the length of the vehicle.

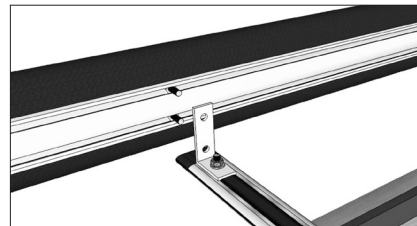

- 05.** Tighten the included M8 nuts onto the mounting bolts and ensure the awning is secure before driving.

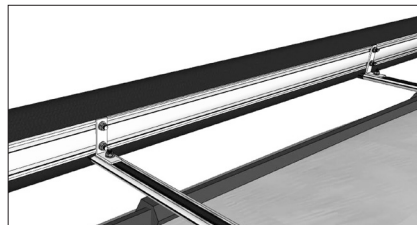

GENERAL WARNINGS

- 01.** The Borne Off-Road Vehicle Rooftop Awning must be mounted at a suitable height so that the doors of the vehicle can be opened without snagging the bottom of the awning.
- 02.** The Borne Off-Road Vehicle Rooftop Awning should be attached at two or more points along its length.
- 03.** The unsecured length at each end of the awning should not exceed 27.5 inches (70cm). If needed adjust the position of the awning or refer to your roof rack manufacturer for additional mounting options.
- 04.** Do not attach the Borne Off-Road Vehicle Rooftop Awning with hardware smaller than M8 x 20mm.

USE INSTRUCTIONS

- 01.** Unzip the awning’s case and release the buckles holding the awning in place.
- 02.** Release the awning horizontal support arms from the main aluminum extrusion. Swing both support arms away from the vehicle and slightly past horizontal. **See Diagram 1.**



- 03.** Fully unroll the awning. **See Diagram 2.**



- 04.** Release the legs of the awning from the front beam.

(Continues on page 4)